

How To Setup Email in an ENVIROMUX Enterprise Environment Monitoring System

Follow these steps to prepare the ENVIROMUX to send Email messages to ENVIROMUX users. This procedure applies to all ENVIROMUX Enterprise Environment Monitoring Systems and Server Environment Monitoring Systems.

1. Apply a valid email address for the ENVIROMUX to the Enterprise Setup Page. Your SMPT server needs to be able to recognize the sender of the email message.

Enterprise Configuration

| Enterprise Name | Server Room E-MINI-LX |
|-----------------|---|
| | Name to identify this unit |
| Location | NTI |
| | Location/Address |
| Contact | Sales |
| | Contact person |
| Phone | 330-555-5555 |
| | Phone number of contact person |
| E-mail | NTI@Gmail.com |
| | E-mail address for messages sent from this unit |

Note: When authentication is required (check your email server requirements) the Username and Password applied on the Network Configuration page must be for the user's email address applied in the Enterprise Setup Page. If no authentication is required, the Username and Password fields can be left empty.

Network Configuration

| 🗄 IPv4 Settings | |
|--------------------|---|
| 🗄 IPv6 Settings | |
| SMTP Settings | |
| SMTP Server | smtp.Gmail.com SMTP server used when sending e-mails |
| Port | 485 SMTP server port |
| Use SSL | SMTP server requires the use of SSL |
| Use Authentication | SMTP server requires authentication to send e-mail |
| Username | NTI Must fill in when authentication is required |
| Password | Password for sending e-mails |

Figure 1- Example of configuration for Gmail server

2. Fill in Network Page with valid information:

A. SMTP Server - check with your service provider as to what this should be. Sometimes it is just the name of the provider (gmail.com), sometimes characters are added (mail.gmail.com, smtp.gmail.com, smtp.mail.gmail.com, etc)

- B. The default port is 25. If authentication is required, a different port number may be required. Check with your service provider.
- C. Check "Use SSL" if your SMTP server requires SSL.
- D. Check "Use Authentication" if SMTP server requires authentication to send emails.
 - a. If required, Enter "Username" and "Password" that has been assigned to ENVIROMUX. Make sure they apply to the email address applied in the Enterprise Setup Page.

Example: username@gmail.com Most servers (not all, check with your service provider) use just the characters in front of the "@" for your Username on the account. These, and only these characters should be entered into the "Username" block.

Note: Passwords are case sensitive. Be sure to apply the password exactly as it is required by the server.

3. Verify User is configured to receive notifications for at least one sensor group as well as having "E-Mail Alerts" selected and a valid "E-Mail address" to send the notifications to. (All sensors are assigned to one of up to 8 groups under Sensor Configuration, and the more groups a user applies a checkmark in, the more sensors they will get notifications about.)

| E Account Settings | | |
|------------------------|--|--|
| E Group Settings | | |
| Group 1 | User receives notifications for Group 1 | |
| Group 2 | User receives notifications for Group 2 | |
| Group 3 | User receives notifications for Group 3 | |
| Group 4 | User receives notifications for Group 4 | |
| Group 5 | User receives notifications for Group 5 | |
| Group 6 | User receives notifications for Group 6 | |
| Group 7 | User receives notifications for Group 7 | |
| Group 8 | User receives notifications for Group 8 | |
| 😑 Contact Settings | | |
| | | |
| E-mail Alerts | User receives alerts via e-mail | |
| Brief E-mail | User receives brief e-mail | |
| E-mail Address | User@Gmail.com E-mail address for the user | |
| Syslog Alerts | User receives alerts via syslog | |
| SNMP Traps | User receives alerts via SNMP traps | |
| Syslog/SNMP IP Address | IP address where syslog messages/SNMP traps are sent for this user | |
| SMS Alerts | User receives alerts via SMS | |
| SMS Number | Phone number where SMS messagess are sent for this user | |

Configure User

Figure 2- Configure user to receive alerts via email